
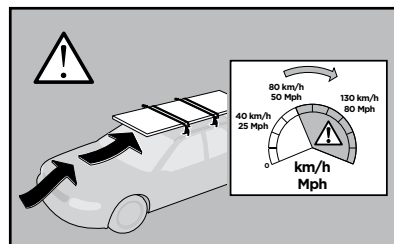
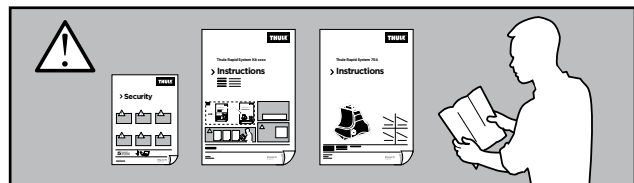
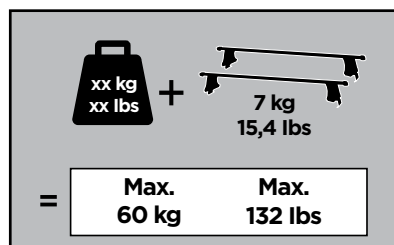


## Thule Rapid System Kit 1038

# > Instructions

**AUDI A3**, 3-dr Hatchback, 96-99, 00-02

**AUDI A3**, 5-dr Hatchback, 99-03

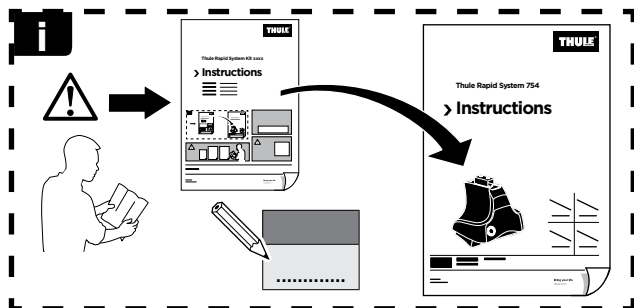

ISO 11154-E


**141038**

C.20121003  
519-1038-01

**Bring your life**  
thule.com



03 x2




90 x2




x1

25 x2





91 x2



x1

1

|                                               | X (scale) | X (mm) | X (inch)                       |
|-----------------------------------------------|-----------|--------|--------------------------------|
| <b>AUDI A3</b> , 3-dr Hatchback, 96-99, 00-02 | 28,5      | 936    | 36 <sup>7</sup> / <sub>8</sub> |
| <b>AUDI A3</b> , 5-dr Hatchback, 99-03        | 28,5      | 936    | 36 <sup>7</sup> / <sub>8</sub> |

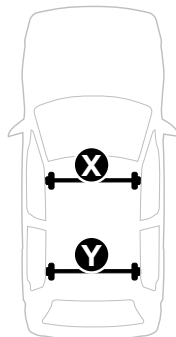
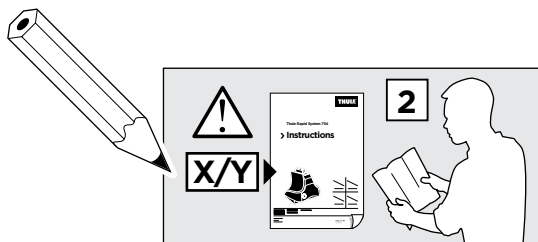


|                                               | Y (scale) | Y (mm) | Y (inch)                       |
|-----------------------------------------------|-----------|--------|--------------------------------|
| <b>AUDI A3</b> , 3-dr Hatchback, 96-99, 00-02 | 27        | 921    | 36 <sup>1</sup> / <sub>4</sub> |
| <b>AUDI A3</b> , 5-dr Hatchback, 99-03        | 27        | 921    | 36 <sup>1</sup> / <sub>4</sub> |


# 2

**AUDI A3, 3-dr Hatchback, 96-99, 00-02**

**AUDI A3, 5-dr Hatchback, 99-03**

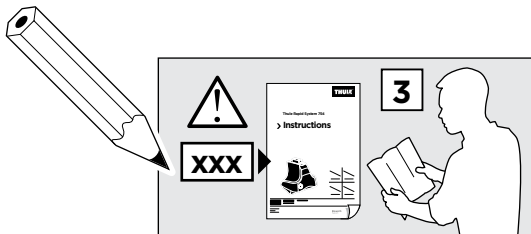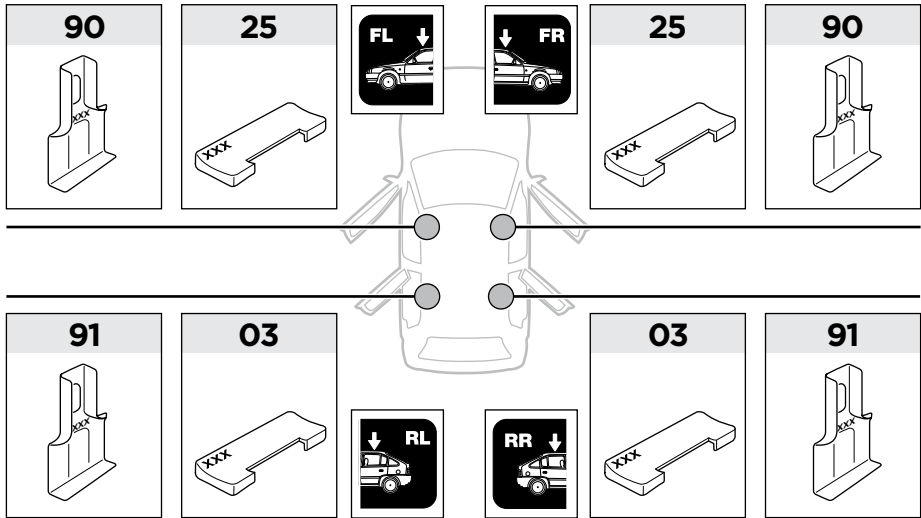


# 3

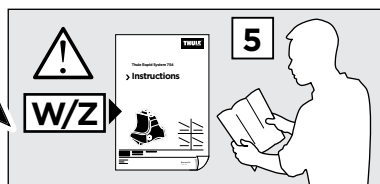


# 5

|                                              | W (mm)     | Z (mm)     | W (inch)  | Z (inch)      |
|----------------------------------------------|------------|------------|-----------|---------------|
| <b>AUDI A3, 3-dr Hatchback, 96-99, 00-02</b> | <b>280</b> | <b>700</b> | <b>11</b> | <b>27 1/2</b> |
| <b>AUDI A3, 5-dr Hatchback, 99-03</b>        | <b>280</b> | <b>700</b> | <b>11</b> | <b>27 1/2</b> |

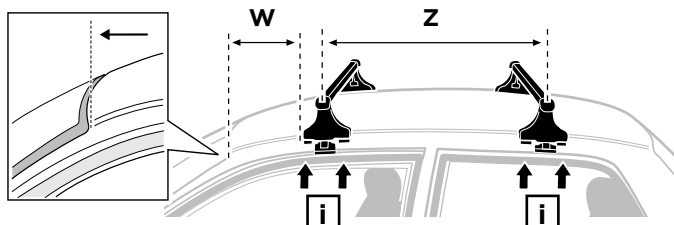

## AUDI A3, 3-dr Hatchback, 96-99, 00-02

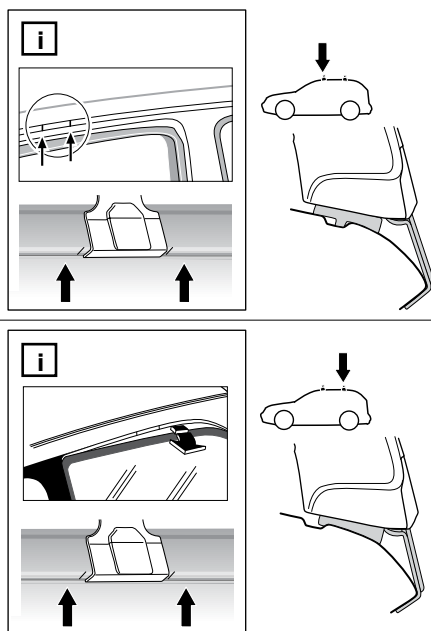

## AUDI A3, 5-dr Hatchback, 99-03

